

7. **Electrical**
 220-240V AC.50HZ IP44
 T. Max 40°C

150mm - 45W

230mm - 80W

300mm - 120W

IMPORTANT
THE FLAPS ON THE
AUTOMATIC FAN WILL TAKE
UPTO ONE MINUTE TO
OPEN AND CLOSE

THIS FAN SERIES IS DOUBLE INSULATED AND DOES NOT REQUIRE AN EARTH. THE EARTH TERMINAL IS PROVIDED FOR SPECIAL INSTALLATIONS ONLY.

NOTE:

Do not install within a shower cubicle (Use a suitable fan from the range of shower fans) or anywhere else where there is a high risk of the fan being sprayed with water.

Fan to be fitted a minimum 2.3 metres from the floor.

IMPORTANT

Switch off mains supply before making any electrical connections. If in any doubt contact a qualified electrician.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other open-fire appliances when mounted in outside windows or walls.

As part of the policy of continuous product improvement Vent-Axia reserve the right to alter specifications without notice

Vent-Axia®

 
www.vent-axia.com

email:info@vent-axia.com

Technical support

Tel: 01293 526062

Fax: 01293 551188



436542A

0907

Vent-Axia®

L6WL(436555),L9WL(436556),L12WL(436557)


L-SERIES FAN RANGE

Installation Instructions

Kit Series

1. Cut a hole through the wall to suit fan type. For telescopic Sleeve Size See diagram 1, dimensions D&E

Diagram 1

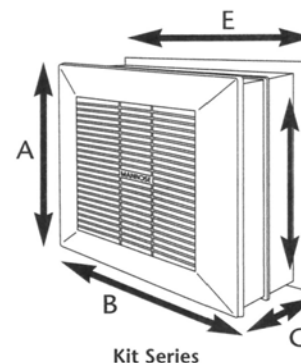

PRODUCT	A	B	C	D	E
150mm	310mm	310mm	160-290mm	275mm	285mm
230mm	390mm	390mm	160-290mm	361mm	365mm
300mm	470mm	470mm	160-290mm	436mm	442mm


2. Fit the telescopic sleeve into the wall. The sleeve is adjustable and suitable for cavity or solid walls. (A longer extension sleeve is available to order) Make sure there is a slight tilt to the outside to allow any water which may get in through the outside grille, drain to the outside.
IMPORTANT Ensure a minimum 300mm of power cable is passed through the cable entry for the electrical connections.
3. Build in the sleeve and make good around the edges. The external and internal grilles have a flange that over hangs the sleeve.

Replacement Series

4. Is supplied without the sleeve and external grille. The series is designed as a replacement for existing installations and fits most makes of sleeve and wall box with little or no modifications to the existing wall box installations. See Diagram 2 for dimensions.
5. All models of the series are secured internally by 4 mounting screws, and secured externally by 4 mounting screws. After fixing the front and rear sections ensure you insert the hole plugs provided.


IMPORTANT: Always ensure that the supply cable cannot obstruct the fan blade.

Diagram 2

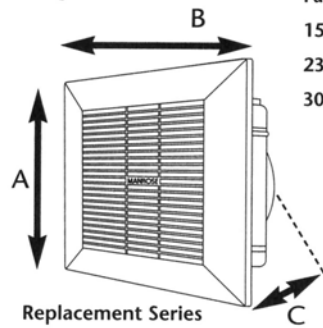

Fan Size	A	B	C
150mm	310mm	310mm	110mm
230mm	390mm	390mm	138mm
300mm	470mm	470mm	154mm

EXPLODED VIEW

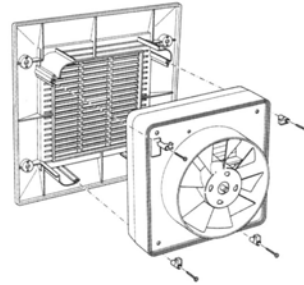


Shows how the fan unit is secured to the front cover

6. Electrical Connections

150mm Fan

This model can only be wired for extract.

Connect the power into the terminal located on the rear of the fan.

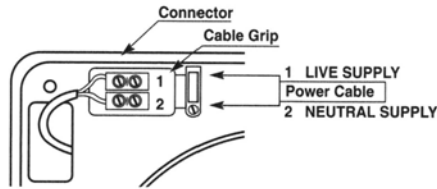

230mm/300mm Fan

The electrical connection using fixed wiring built into the wall is made via a 5 pin plug in connector (complete with cable grip) which is supplied with each fan unit for ease of electrical installation when connected to the incoming power cable it simply plugs into the rear of the fan unit.

NOTE (Diagram A) The 230mm/300mm series can be wired via 3 core cable for intake only.

NOTE (Diagram B) The 230mm/300mm series can be wired via 3 core cable for extract only.

NOTE (Diagram C) If the 2 speed reversible controller is used with the 230mm/300mm series, 5 core cable is required (which is available separately).

These fans are double insulated and do not require an earth. All wiring must comply with current IEE regulations. A double pole isolating switch, having a contact separation of at least 3mm in all poles, must be used with a 3amp fuse fitted. The fan must not be accessible to a person using either a bath or a shower and mounted a minimum of 1.8m from the floor.

Plug Wiring Diagram

Diagram A

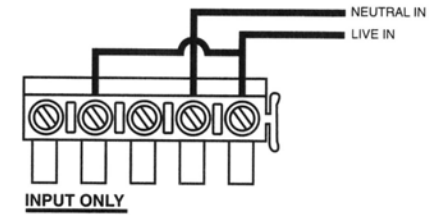


Diagram B


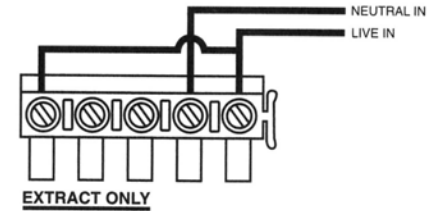


Diagram C

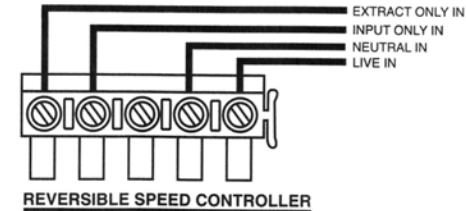

WIRING DIAGRAM

1. DIAGRAM A Intake ONLY

To change the airflow direction remove link from terminal 1 in the plug and connect into terminal 2.

2. DIAGRAM B EXTRACT ONLY

All models are pre wired in factory to extract only. When the cable supplied with the socket for test purposes is connected to a fused spur or plug socket.

3. DIAGRAM C REVERSIBLE SPEED CONTROLLER

For the 230mm/300mm models using a reversible variable speed controller.